


# EXPLODED VIEW RDI-BS08

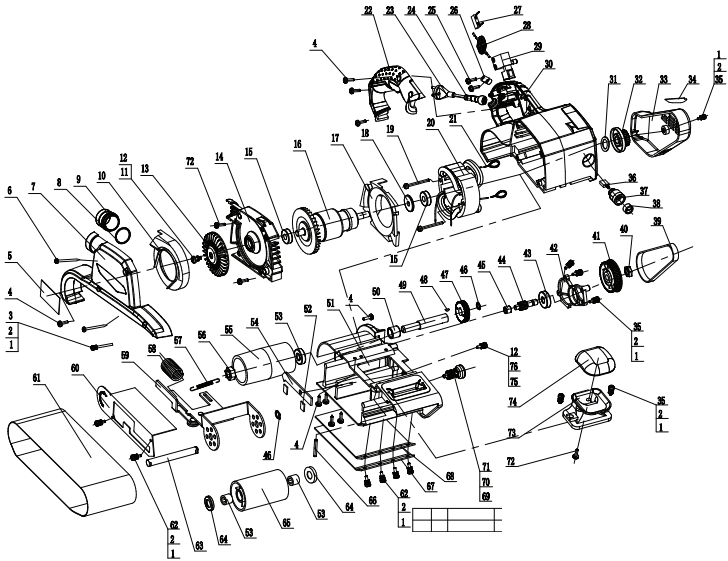

## PARTS LIST RDI-BS08

spare parts list for RDI-BS08		
No	parts	pcs
1	plain washer	13
2	washer for spring	13
3	screw (M4×40)	1
4	screw	12
5	nameplate	1
6	screw ST4.8×45	2
7	Aluminum side cover	1
8	o-type washer	1
9	dust adpater	1
10	dustshield circle	1
11	screw	1
12	washer for spring	2
13	dust-out fan	1
14	Aluminum middle cover	1
15	bearing	2
16	rotor	1
17	windshield circle	1
18	insulate washer	1
19	screw	2
20	stator	1
21	spring	2
22	handle cover	1
23	cable	1
24	cabale sleeve	1
25	screw	2
26	cable press plate	1
27	capator	1
28	inductance	1
29	switch	1
30	housing	1

31	plain washer	1
32	small pulley	1
33	belt cover	1
34	small pulley cover	1
35	screw	6
36	carbon brush	2
37	brush grip	2
38	brush grip cover	2
39	co-work belt	1
40	hex head nut	1
41	big pulley	1
42	gear cover	1
43	bearing	1
44	small gear	1
45	needle bearing	1
46	circlip	2
47	big gear	1
48	semicircle key	1
49	rear wheel roller	1
50	needle bearing	1
51	base	1
52	ceramic piece	2
53	block bar	1
54	bearing	3
55	rear wheel	1
56	hex head nut	1
57	reset spring	1
58	front wheel spring	1
59	front wheel frame	1
60	front wheel cover	1
61	sanding belt	1
62	screw	6
63	front wheel roller	1

64	plain washer	2
65	front wheel	1
66	screw	1
67	iron bottom plate	1
68	rubber bottom plate	1
69	adjust spring	1
70	plain washer	1
71	adjust knob	1
72	screw	3
73	front handle	1
74	front handle cover	1
75	screw	1
76	plain washer	1
77	dust bag set	1