


Exploded view of Polisher RD-PC06

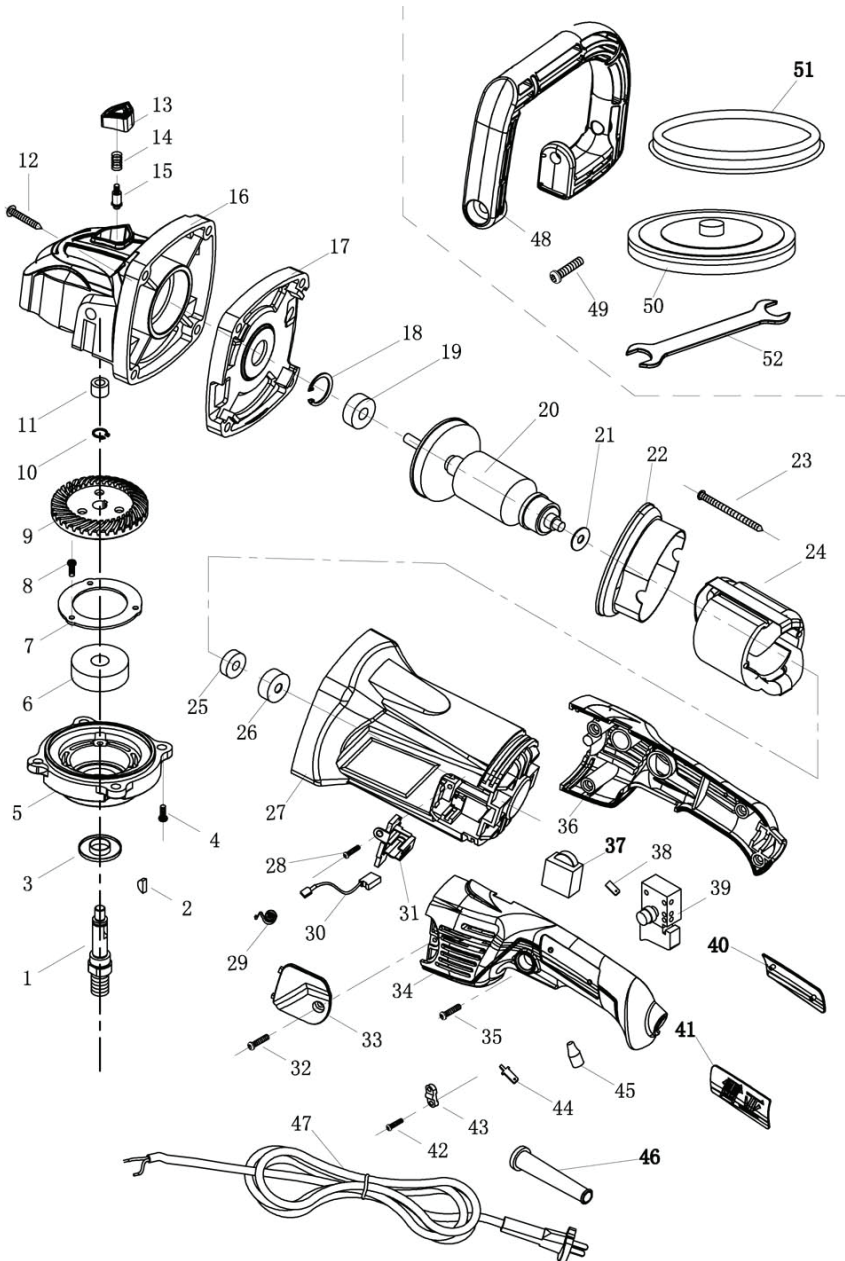

PARTS LIST					
No	Description	Qty	No	Description	Qty
1	Outputshaft	1	27	House	1
2	Woodruff key	1	28	Screw ST4X10BT	2
3	Dust cap	1	29	Coil spring	2
4	Screw M5X14	4	30	Carbon brush	2
5	front cover	1	31	Brush yoke	2
6	Bearing6202RS	1	32	Screw ST4.2X12BT	2
7	Bearing cover	1	33	Left and right side cover	2
8	Screw M4x8	3	34	Left handle	1
9	Big gear	1	35	Screw ST4.2X16BT	4
10	Axle spring	1	36	Right handle	1
11	Needle bearing	1	37	speed controller	
12	Screw ST5X35	4	38	jeans button	2
13	Locking cap	1	39	Switch	1
14	Locking spring	1	40	Right handle card	1
15	Lock pin	1	41	Left handle card	1
16	gearcase	1	42	Screw ST4.2X14A	2
17	inner cover	1	43	Cable pressing plate	1
18	Hole card spring	1	44	Male tab	2
19	bearing 6201DW	1	45	wire nut	1
20	Rotor	1	46	Cable Sheath	1
21	Steel gasket	1	47	Cable wire	1
22	Fan shroud	1	48	Assistant handle	1
23	Screw ST5X65A	2	49	Screw M8x20	2
24	Stator	1	50	Polishing disk	1
25	Bearing 608DDW	1	51	felt wheel	1
26	Bearing holder	1	52	Spanner	1