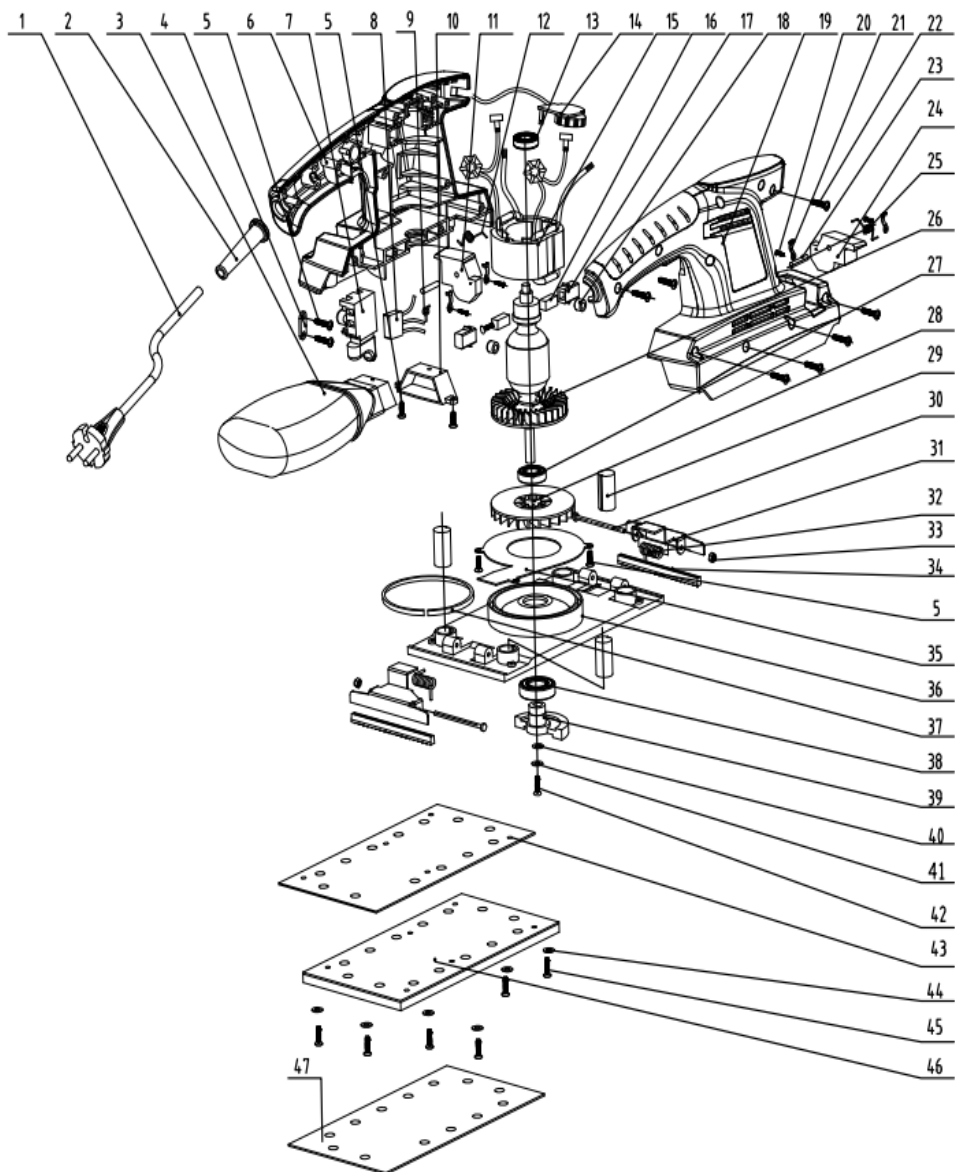


EXPLODED VIEW

RDP-SA27 Spare Parts List

1	cable
2	cable sleeve
3	dust bag assembly
4	cable press plate
5	screw ST4.2*12
6	left housing
7	switch
8	capacitance
9	spring
10	dust tube
11	left button
12	spring
13	bearing 607ZZ
14	speed control board
15	stator
16	carbon brush
17	carbon brush box assembly
18	rubber nail
19	right housing
20	screw ST2.9*10
21	tableting
22	screw ST4.2*16
23	pin

24	right button
25	spring
26	rotor
27	bearing 629ZZ
28	vacuuming fan blade
29	swing column
30	screw M4*60
31	clamp plate
32	spring
33	nut
34	Non-slip mat
35	dust board
36	aluminum base plate
37	wool strip
38	bearing 6002-2RS
39	eccentric wheel
40	washer
41	spring washer ϕ 5
42	screw M5*20
43	EVA
44	spring washer ϕ 4
45	screw M4*8
46	EVA base assembly
47	sanding paper