


EXPLODED VIEW

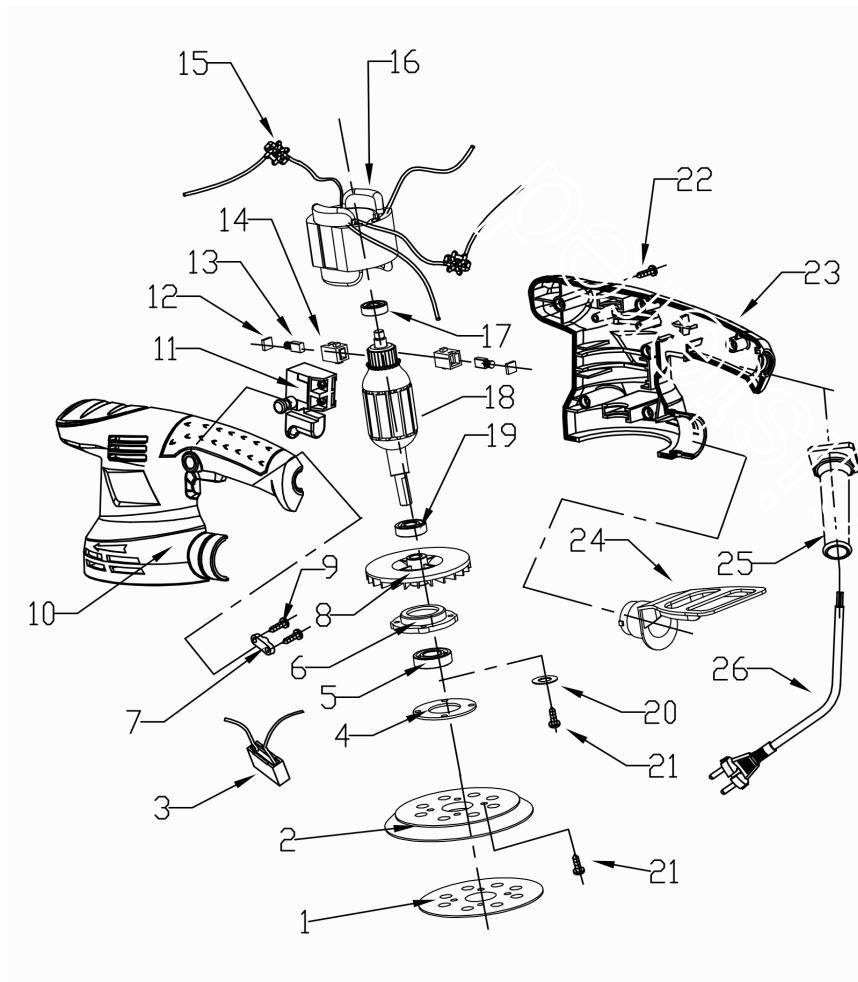

SPARE PARTS LIST

No.		Description	Quantity
1		sanding paper	1
2		sanding wheel	1
3		capacitor	1
4		bearing cover	1
5		6002 bearing	1
6		front cover	1
7		cable clamp	1
8		aluminium fan	1
9		Screw and washher asm	M4.2×14
10		left housing	1
11		switch	1
12		carbon brush cap	2
13		carbon brush	2
14		carbon brush holder	2
15		inducter	2
16		stator	1
17		6008 bearing	2
18		rotor	1
19		609 bearing	1
20		plant pad	1
21		Screw and washher asmm	5×14
22	ST3.9×18	Screw and washher asmST3.9×18	6
23		right housing	1
24		dust collect and holder	1
25		cable protector	2
26		cable	1