


EXPLODED VIEW

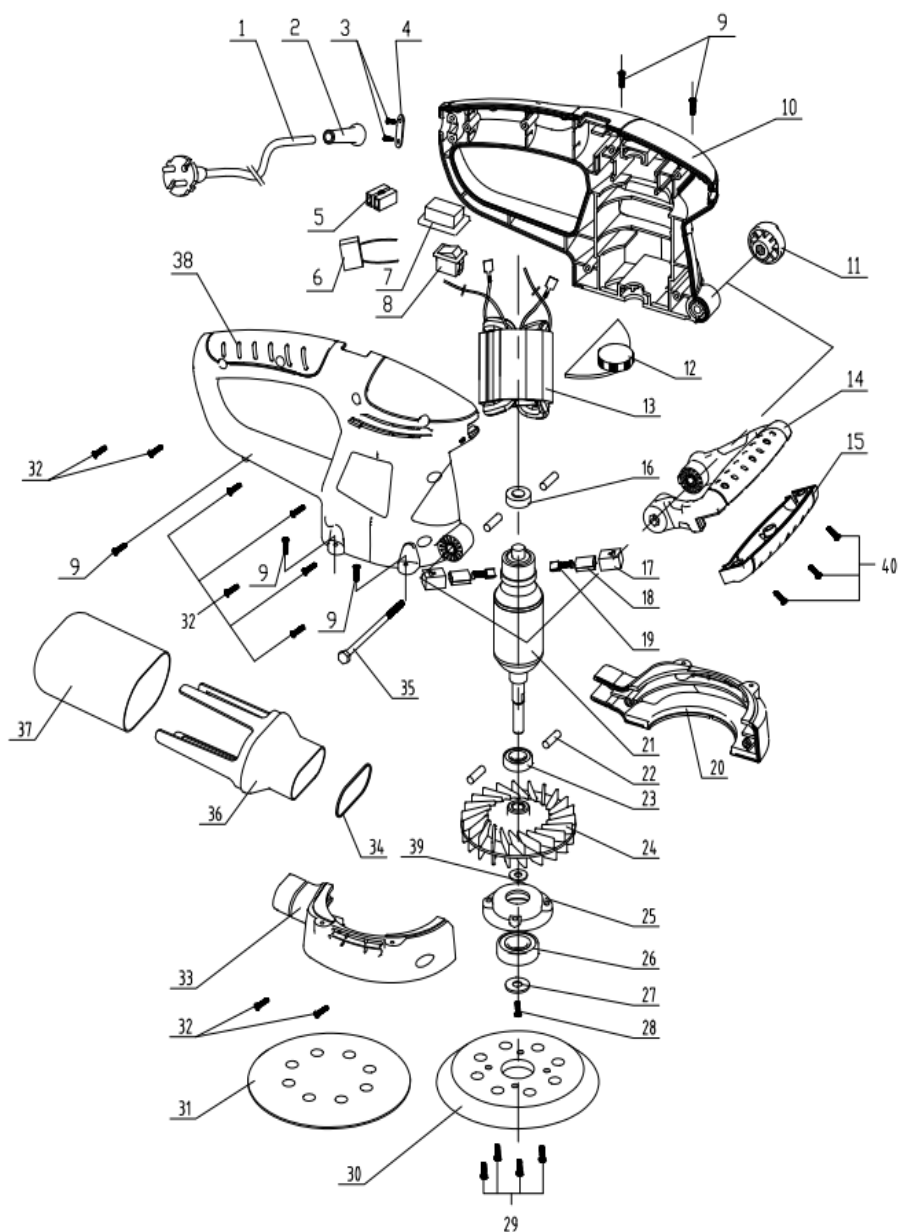

SPARE PARTS LIST

1	cable	
2	cable cover	
3	screw ST3.9*14	
4	cable press plate	
5	connection rod	
6	capacitance	
7	cover sleeve	
8	switch	
9	screw ST3.5*16	
10	left housing assembly	
11	rotary knob	
12	speed control board	
13	stator	
14	auxiliary handle assembly	
15	handle cover assembly	
16	bearing 607ZZ	
17	carbon brush box	
18	carbon brush box lining	
19	carbon brush	
20	left base	
21	rotor	
22	rubber rod	
23	bearing 609zz	
24	fan blade	
25	bearing base	
26	bearing 6002-RS	
27	pressing plate	
28	screw M5*14	
29	screw M5*14	
30	base	
31	sanding paper	
32	screw ST3.9*16	
33	right base	
34	"O"Seal ring	
35	screw M5*75	
36	dust bag holder	
37	dust bag	
38	right housing assembly	
39	wash	
40	screw ST3.5*12	