


Exploded drawing of Oscillating multi-tool RD-OMT04

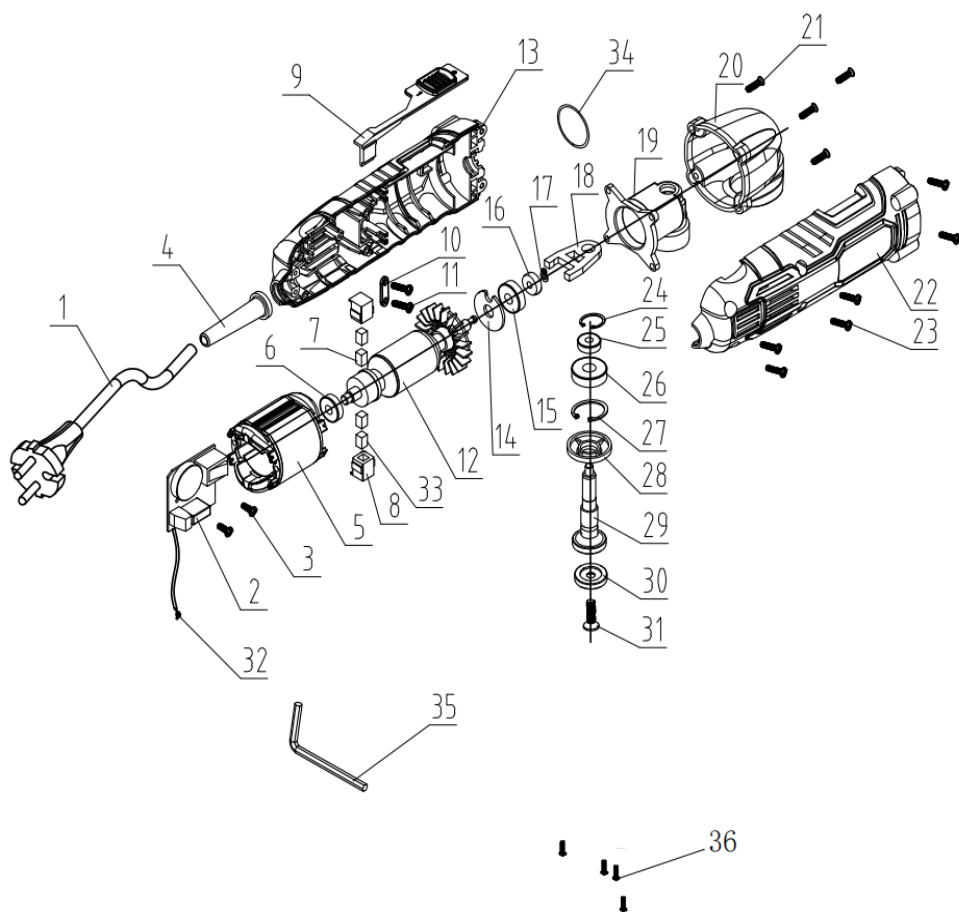

Spare Parts List of Oscillating multi-tool RD-OMT04

No.	Description
1	cable
2	speed control board
3	screw ST2.9*10
4	cable sleeve
5	stator
6	bearing 607ZZ
7	carbon brush
8	carbon brush box
9	push button
10	cable pressing plate
11	screw ST3.9*14
12	rotor
13	left housing
14	balance block
15	bearing 608-2RS
16	bearing 625-Z
17	ring
18	Oscillating axle
19	Aluminum head capsule
20	head capsule cover
21	screw ST3.9*18
22	right housing
23	screw ST3.9*16
24	ring
25	bearing 606ZZ
26	bearing 6000-2RS
27	ring
28	dustproof cover
29	output shaft
30	Blade clamp
31	screw M6*20
32	spring
33	carbon brush lining
34	seal ring
35	spanner
36	screw ST3.5*10