


RDI-AG58 Exploded View

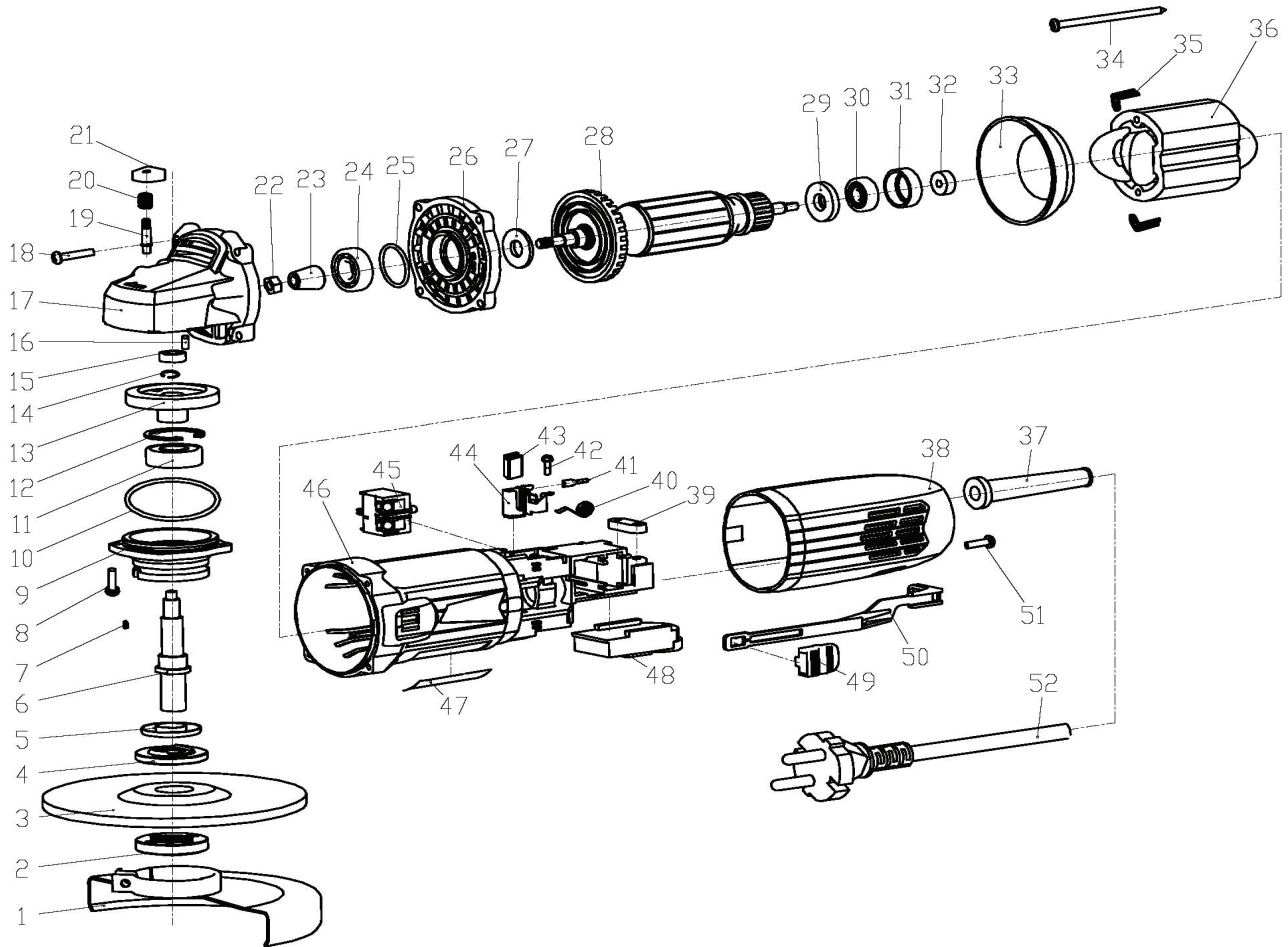

RDI-AG58 Spare Parts List

No	Name	QTY
1	wheel guard	1
2	outer flange	1
3	grinding wheel	1
4	inner flange	1
5	dust proof cover	1
6	output shaft	1
7	woodruff key	1
8	screw	4
9	front cover	1
10	o-ring	1
11	bearing 6201	1
12	retaining ring	1
13	spiral bevel gear	1
14	retaining ring	1
15	bearing 696	1
16	gear box	1
17	shake-proof pin	1
18	tapping screw	1
19	self-lock pin	1
20	compression spring	1
21	self-lock cap	1
22	gear box	1
23	spiral bevel gear	1
24	bearing 6001	1
25	o-ring	1
26	gear box cover	1
27	flat washer	1
28	armature	1
29	insulation washer	1
30	bearing 627	1
31	bearing sleeve	1
32	magnet ring	1
33	baffle plate	1
34	tapping screw	1
35	stator washer	2
36	stator	1
37	cord guard	1
38	rear cover	1
39	strain relief	1
40	coil spring	2
41	buckle	6
42	tapping screw	2
43	carbon brush	2
44	brush holder	2
45	switch	1
46	housing	1
47	trademark	1
48	speed controller	1
49	switch knob	1
50	switch lever	1
51	tapping screw	3
52	cable	1