


ANGLE GRINDER EXPLODED VIEW

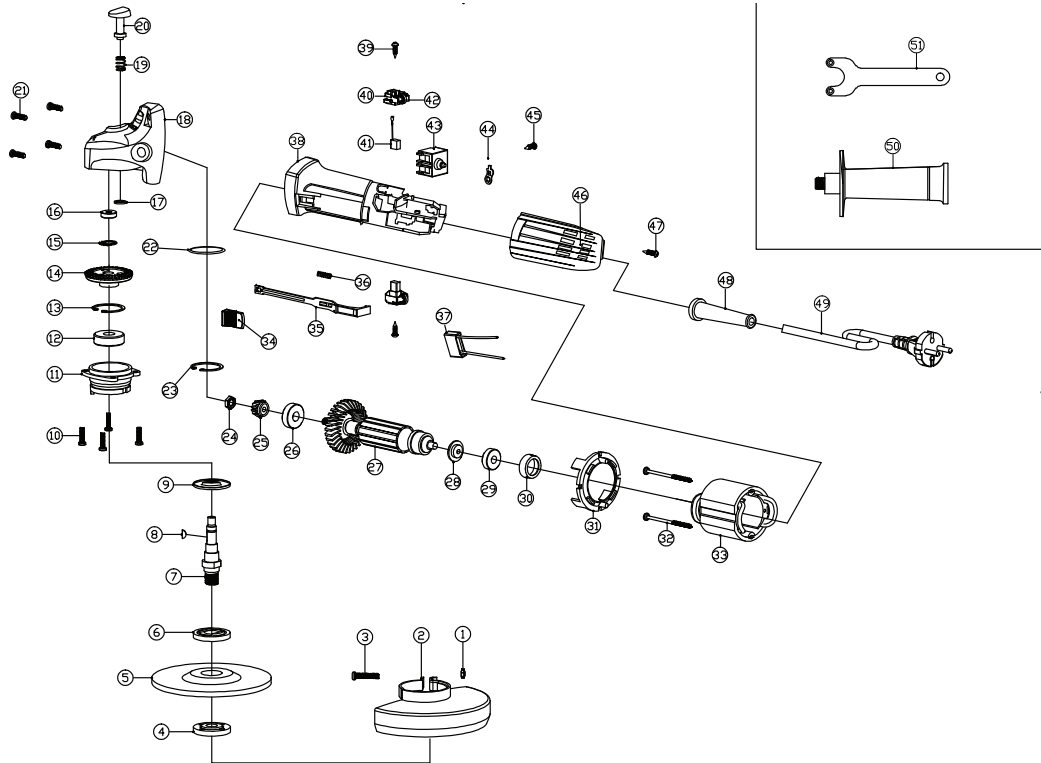

RDP-AG68 SPARE PARTS LIST

NUM.	Description	QTY	NUM.	Description	QTY
1	NUT M5	1	27	rotor	1
2	wheel guard	1	28	ring	1
3	M5X25 screw	1	29	bearing 607	1
4	down plate	1	30	bearing bush	1
5	grinding wheel		31	fan ring	1
6	up plate	1	32	screw ST4X65	2
7	output shaft	1	33	stator	1
8	woodruff key 3x10	1	34	switch button	1
9	dust cover	1	35	switch bar	1
10	screw M4X14	4	36	spring	1
11	front cover	1	37	capacitance 0.22 μ F	1
12	bearing 6021	1	38	housing	1
13	ring Φ 32	1	39	screw ST3X10	2
14	big gear	1	40	brush holder SA	2
15	ring Φ 12	1	41	carbon brush	2
16	bearing 696	1	42	spring	2
17	open card	1	43	switch	1
18	gearbox	1	44	pressing plate	1
19	spring	1	45	screw BT4X12	1
20	self-lock	1	46	back cover	1
21	screwBT4X25	4	47	screw BT4X12	1
22	ring	1	48	protect sleeve	1
23	inside card	1	49	cable	1
24	nut M6	1	50	side handle	1
25	small gear	1	51	wrench	1
26	bearing 629	1			