


RDP-AG79 Explosive View

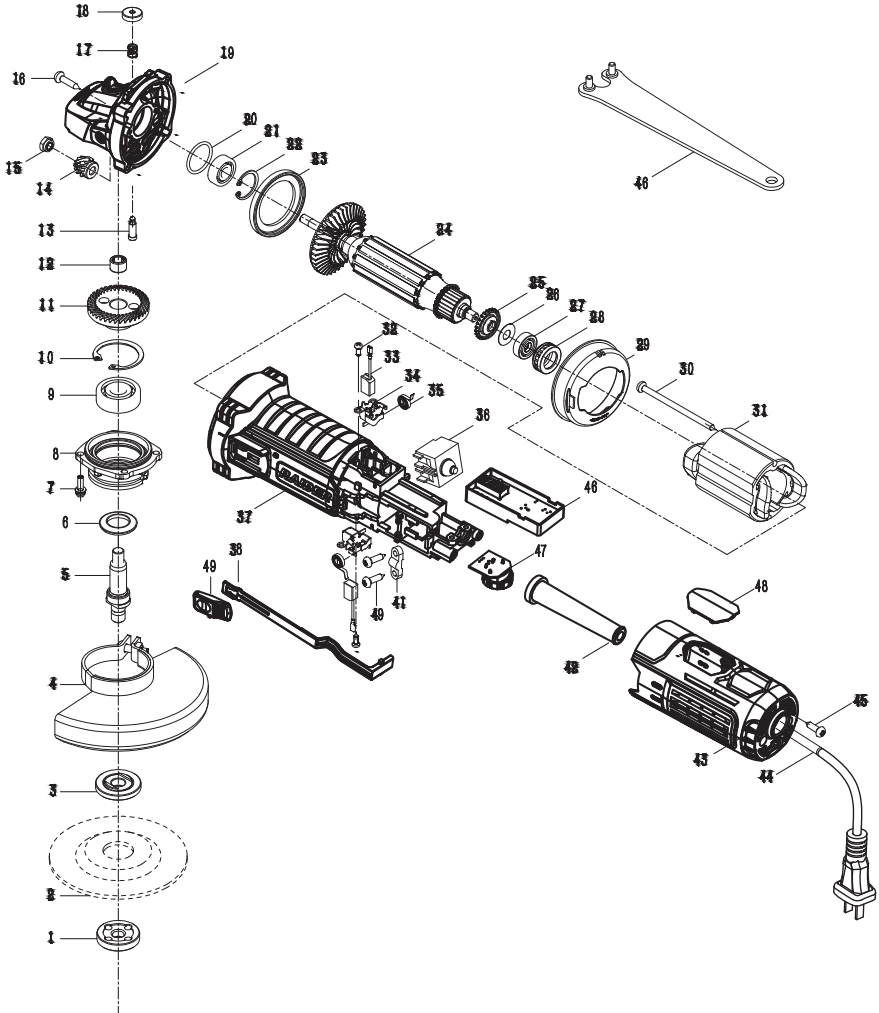

RDP-AG79 Spare Parts List

序号	N	name	qty
1	1	up flange	1
2	2	disc	1
3	3	down flange	1
4	4	spindle	1
5	5	dust-protection cover	1
6	6	disc guard	1
7	7	cross head screw M4X14	4
8	8	front cover	1
9	9	ball bearing 6201	1
10	10	spring pad32	1
11	11	big gear	1
12	12	needle bearing HK0810	1
13	13	gear box	1
14	14	self-lock pin	1
15	15	self-lock pin spring	1
16	16	self-lock button	1
17	17	cross head screw ST4.2x20-F	1
18	18	nutM6	1
19	19	small gear	1
20	20	ball bearing 629	1
21	21	o ring	1
22	22	middle cover	1
23	23	rotor	1
24	24	dust-protection ring	1
25	25	ball bearing 607	1
26	26	bearing cover 608	1
27	27	wind-protection ring	1
28	28	cross head screw ST4.2x65	1
29	29	stator	1

30	30	housing	1
31	31	switch block	1
32	32	label	1
33	33	connection pole	1
34	34	spring	1
35	35	carbon brush holder	2
36	36	carbon brush	2
37	37	cross head screw ST2.9x8-F	2
38	38	spring of carbon brush	2
39	39	back cover	1
40	40	cross head screw ST4.2x16-F	1
41	41	head of inner cable connection	1
42	42	switch	1
43	43	cable cover	1
44	44	cross head screw ST4.2x14-F	1
45	45	cable guard	1
46	46	Integrated circuit board	4
47	47	variable-speed controller	1
48	48	display cover	1
49			
50			
51			
52			
53			