


RD-AG55 Explosive View

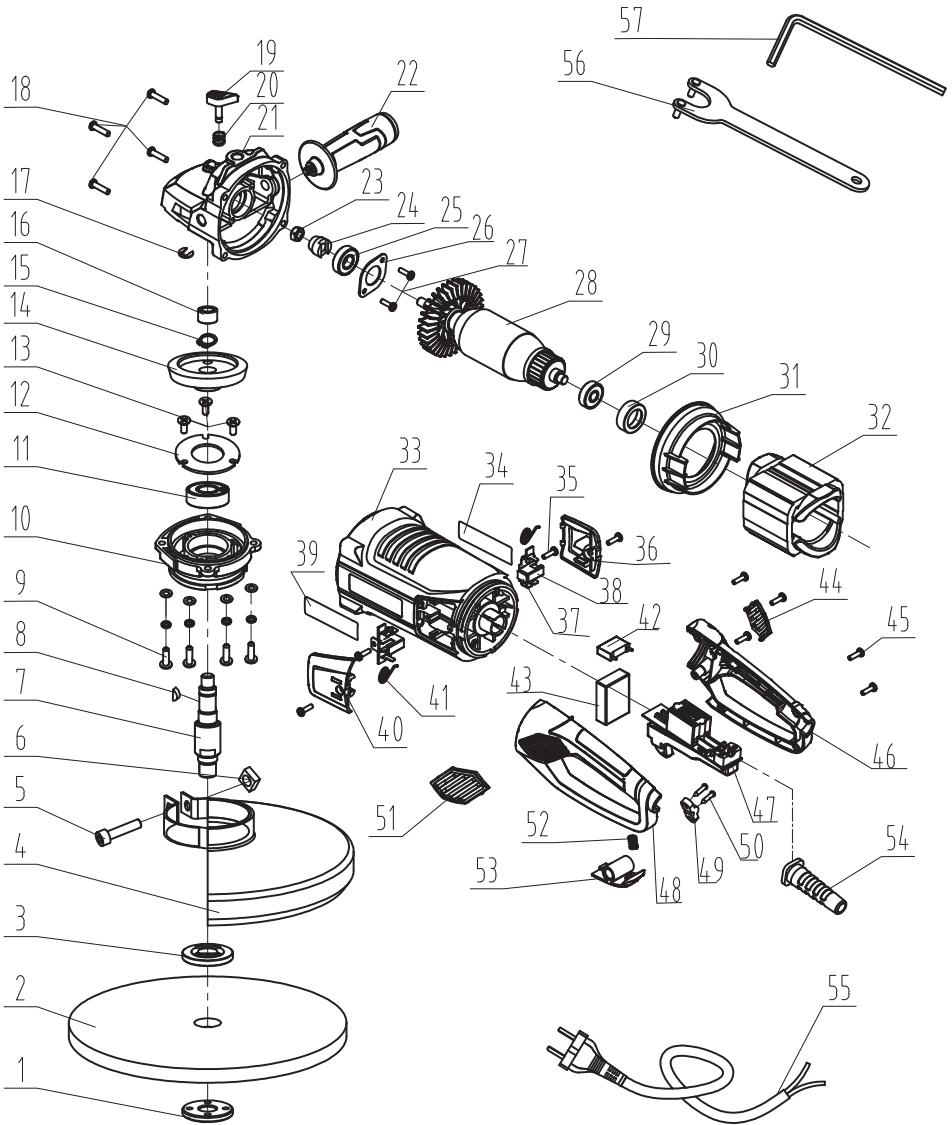

RD-AG55 Spare Parts List

Parts No.	Description	Qty
1	Wheel nut	1
2	Grinder wheel	1
3	Locating washer	1
4	Wheel guard	1
5	Socket cap screw M8x30	1
6	Square nut M8	1
7	Spindle	1
8	Woodruff key(4×13)	1
9	Screw M5×14	4
10	Fore cover	1
11	Bearing 6202	1
12	Fixing plate A	1
13	Screw M4×10	3
14	Big gear	1
15	Shaft circlip 14	1
16	Oil bearing(Φ16×Φ10×10)	1
17	Split circlip 5	1
18	Screw ST4.8×25	4
19	Locking pin	1
20	Pin spring	1
21	Gear box	1
22	Side handle	1
23	Locking nut M8	1
24	Little gear	1
25	Bearing 6001	1
26	Fixing plate A	1
27	Countersunk head screw M4×10	2
28	Rotor	1
29	Wind baffle	1
30	Bearing 629	1
31	Bearing rubber bush	1
32	Stator	1
33	House	1
34	Name plate	1

Parts No.	Description	Qty
35	Screw ST4.2×10	4
36	Brush holder cap	1
37	Carbon brush	2
38	Brush holder	2
39	Lable	1
40	Brush holder cap	1
41	Coil spring	2
42	Capacitor 0.33uf	1
43	Soft start	1
44	House cover	1
45	Screw ST4.2×16	5
46	Right handle	1
47	Switch	1
48	Left handle	1
49	Cable clip	1
50	Screw ST4.2×14	2
51	House cover	1
52	Knob spring	1
53	Spin lock button	1
54	Cable jacket	1
55	Cable	1
56	Spanner	1
57	Allen wrench	1