


Exploded drawing of Tile Cutting Machine RDP-ETC31

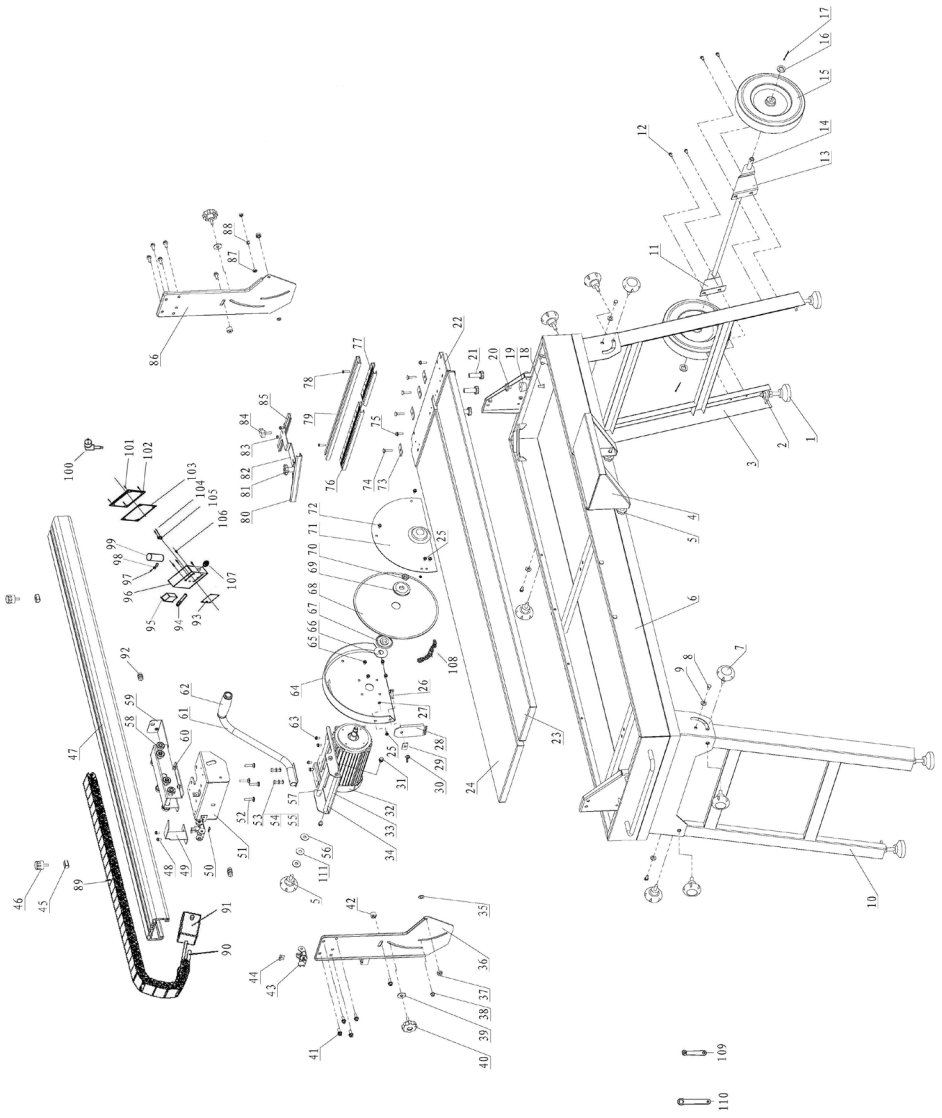

Spare Parts List of TILE CUTTING MACHINE RDP-ETC31

NO	Name	QTY	NO	Name
1	Rubber feet	4	56	Flat washer
2	Nut	8	57	Move the axis
3	Supporting leg (right)	1	58	Bearing
4	Auxiliary work surface	1	59	Mobile box
5	Screw	2	60	Nut
6	Sink	1	61	Handle
7	Handle	9	62	Handle cover
8	Screw	4	63	Screw
9	Flat washer	4	64	Inner guard
10	Supporting leg(left)	1	65	Screw
11	Fixed plate of wheel	1	66	Water blocking ring
12	Screw	4	67	Inner flange
13	Fixed plate of wheel	1	68	Blade
14	Wheel axle	1	69	Outer flange
15	Wheel	2	70	Nut
16	Flat washer	2	71	Outer Guard
17	Cotter pin	2	72	Screw
18	Screw	1	73	Guide plate
19	Pad	1	74	Screw
20	Nut	1	75	Screw
21	Nut	4	76	Guide 1
22	Connecting plate	1	77	Guide 2
23	The work surface	1	78	Screw
24	The work surface 1	1	79	Fixed guide groove