


ANGLE GRINDER EXPLODED VIEW

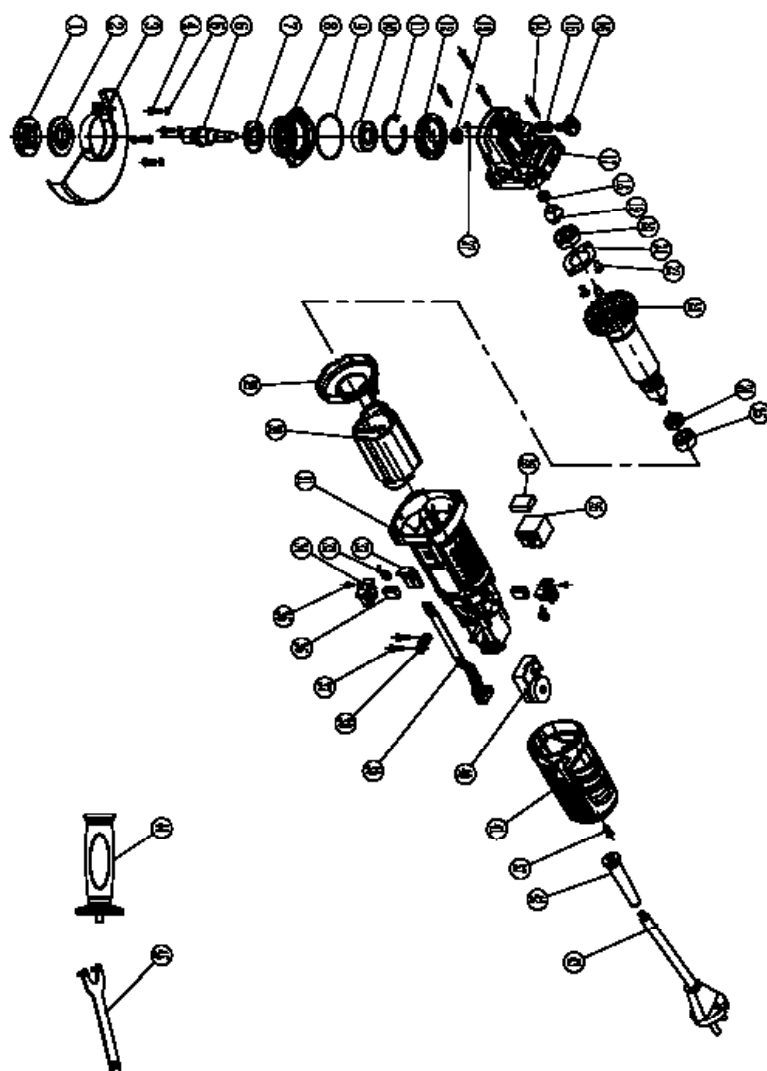

RDP-AG75 SPARE PARTS LIST

No	description
1	Upper platen
2	Lower platen
3	Grinding wheel cover assembly
3,1	Grinding wheel cover
3,2	Hex nuts
4	Cross recessed pan head machine screw
5	spring pad
6	Output shaft
7	Dust cover
8	The front cover
9	O-ring
10	Deep groove ball bearings
11	elastic retaining ring for hole
12	big gear
13	Deep groove ball bearings
14	Cross recessed pan head tapping screws
15	Self-locking spring
16	Self-locking button
17	head shell
18	nut
19	gear
20	Deep groove ball bearings
21	Bearing pressure plate
22	Cross recessed countersunk head screws
23	rotor
24	Deep groove ball bearings
25	Bearing sleeve
26	switch
27	capacitor
28	Open retaining ring
29	Wind guide circle
30	stator
31	chassis
32	switch push block
33	coil spring
34	Brush holder
35	Cross recessed pan head tapping screws
36	carbon brush
37	Cross recessed pan head tapping screws
38	Cable pressure plate
39	tie rod
40	governor
41	rear cover
42	Cable jacket
43	Cable
44	Auxiliary handle
45	wrench