


RDI-AG47 Explosive View

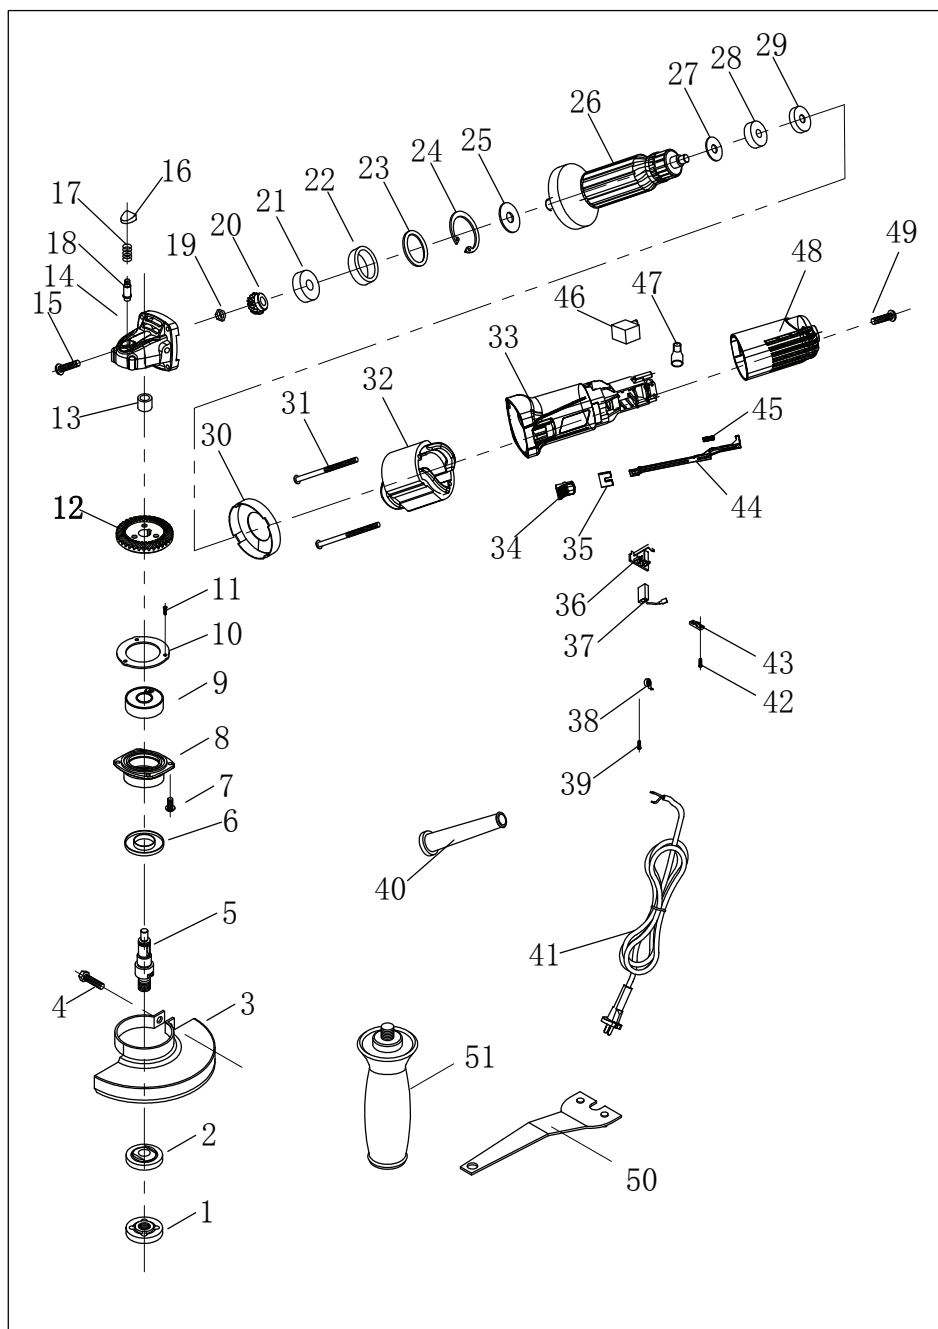

RDI-AG47 Spare Parts List

Parts No.	Description	Qty
1	outer flange	1
2	inner flange	1
3	wheel guard	1
4	screw M5*20	1
5	output spindle	1
6	dust-proof cover	1
7	screw M4*14	4
8	front cover	1
9	bearing 6201	1
10	bearing retaining plate	1
11	screw M4*8	3
12	big gear	1
13	needle bearing	1
14	gearcase	1
15	screw ST5*22	4
16	spindle lock button	1
17	spindle lock spring	1
18	spingdle lock pin	1
19	hex nut M6	1
20	pinion	1
21	608 bearing	1
22	rubber column ring	1
23	big spring washer	1
24	internal retaining ring	1
25	stainless steel washer	1
26	armture	1
27	stainless steel washer	1
28	607 bearing	1
29	607 bearing sleeve	1
30	baffle	1
31	screw ST4.2*65	2
32	stator	1
33	housing	1
34	push board	1

Parts No.	Description	Qty
35	steel sheet	1
36	brush holder	2
37	carbon brush	2
38	brush spring	2
39	screw ST3.5x8	2
40	cord sleeve	1
41	power cord	1
42	screw ST4.2x14	2
43	cord clamp	1
44	lever	1
45	lever spring	1
46	switch	1
47	wiring cap	1
48	rear cover	1
49	screw ST4.2x16	2
50	spanner	1
51	side handle	1