


EXPLODED VIEW

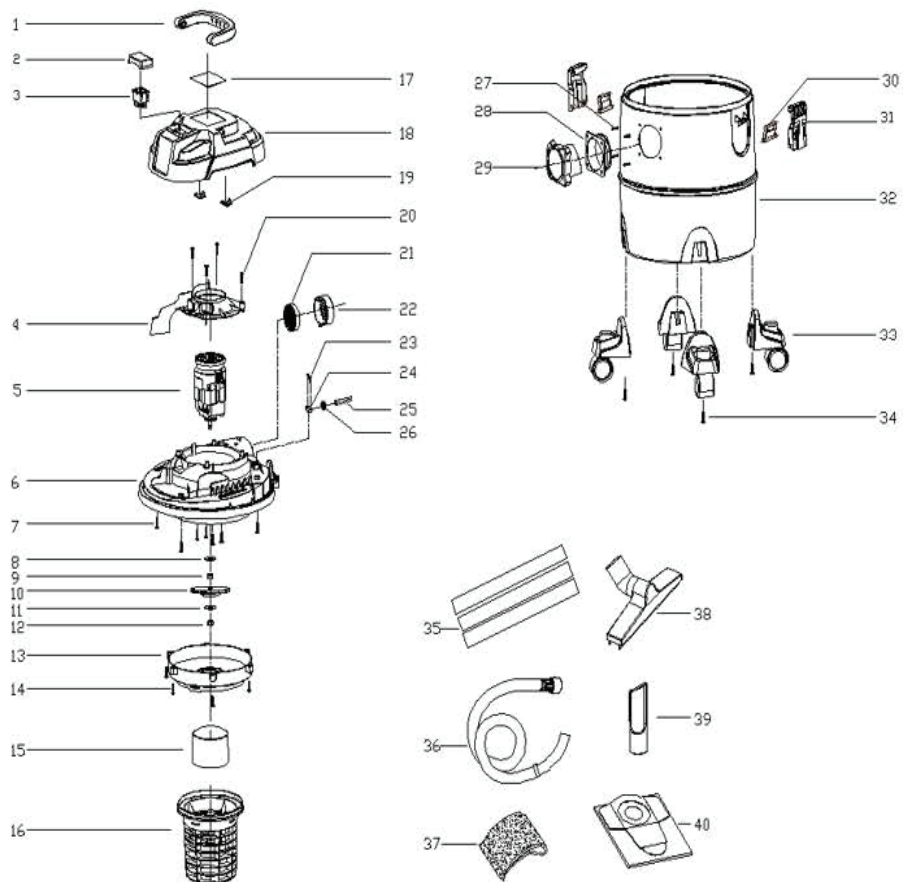

SPARE PARTS

Part no.	description	QTY
1	Handle	1
2	Switch push bottom	1
3	Switch	1
4	Motor top cover	1
5	Motor	1
6	Motor base cover	1
7	Screw	8
8	Washer	1
9	Bushing	1
10	Fan	1
11	Washer	1
12	Nut	1
13	Air inlet grid	1
14	Screw	6
15	Floating block	1
16	Filter support	1
17	Name plate	1
18	Top cover	1
19	Stopples	2
20	Screw	4
21	Air outlet foam	1
22	Air outlet plate	1
23	Screw	2
24	Power cord plate	1
25	Power cord	1
26	Power cord sheathing	1
27	Screw	4
28	Suction connection plate	1
29	Suction connection	1
30	clip Connect plate	2
31	Clip 2	2
32	Tank-20L	1
33	Wheel	4
34	Screw	4
35	tube	3
36	Hose	1
37	Filter foam	1
38	Wet brush	1
39	Crevice nozzle	1
40	paper bag	1