


RD-HM11

Exploded view

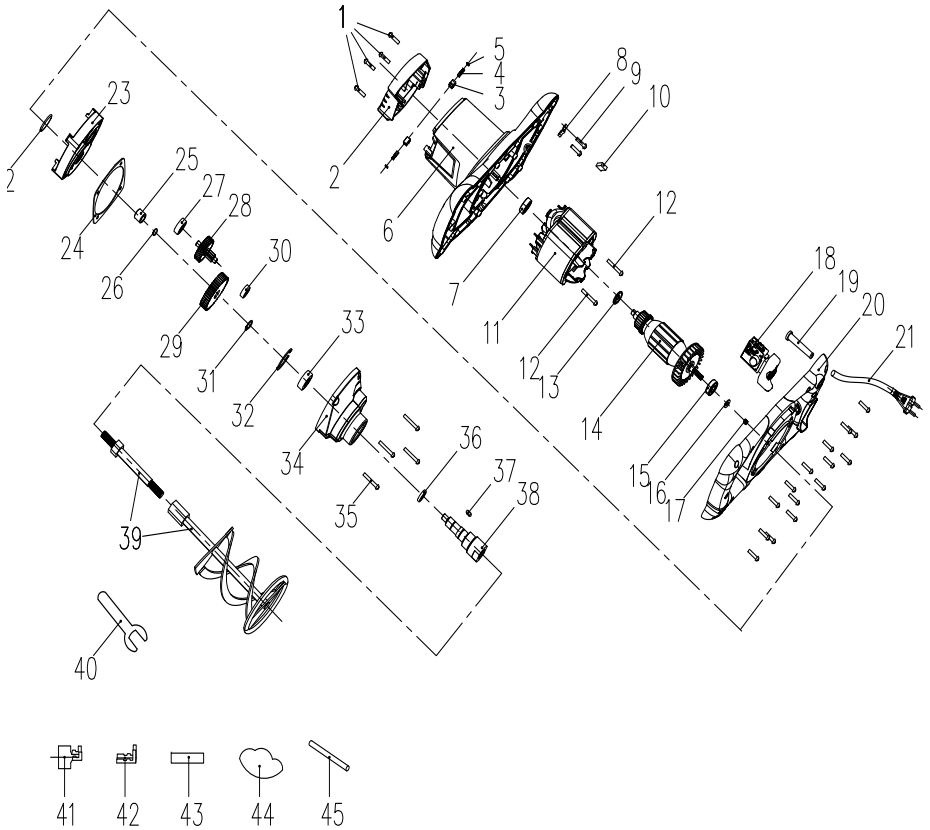

RD-HM11

Spare parts list

NO.	DESCRIPTION	DESCRIPTION	QUANTITY
1		screw ST4*16	19
2	R6120	back cover	1
3	FME190	brush holder	2
4	FME190	carbon brush	2
5	FME190	cover of brush holder	2
6	R6120	motor housing	1
7	608	bearing 608	1
8		cable plate	1
9		screw ST4*16	2
10		Capacitor	1
11		stator	1
12		screw ST5*60	2
13		insulation	1
14		rotor	1
15		bearing 609RS	1
16		Wool washer	1
17	R6120	spring of rotor	1
18	R6120	switch	1
19		Cable sleeve	1
20	R6120	handle cover	1
21		Cable	1
22	O	O ring $\phi 27 \times \phi 2$	1
23	R6121	middle cover	1
24		Paper washer	1
25		bearing HK0810	1
26		elastic collar $\phi 13$	1
27	627	bearing 627ZZ	1
28		small gear	1
		main driving shaft	1
		ball 3mm	1
29		big gear	1
30	607	bearing 607-RZ	1
31		elastic collar $\phi 15$	1
32		elastic collar $\phi 32$	1
33	6002	bearing 6002RS	1
34	R6121	gear box	1
35		screw ST4.8*65	4
36		oil seal	1
37		pin5X12	1
38	R6120	output shaft	1
39	R003	mixing paddle	1
40	S7182	spanner	2
41		Brush frame side	2
42		H buckle	2
43		Heat shrinkable tube	2
44		oil	35