

ESALATORI IN TPE SEMPLICI E DOPPI PROTEZIONE CIRCOLARE

SIMPLE WALL AND DOUBLE WALL TPE ROOF VENTS PROTECTION COLLAR



Applicazione
a fiamma
Torch-on
application

La funzione dell'esalatore è permettere la fuoriuscita del vapore che si crea al di sotto del manto impermeabile. Viene realizzato in due modelli: il tipo "semplice" che si usa in presenza del solo manto impermeabile ed il tipo "doppio" che si usa in presenza di pannello isolante. Raccomandiamo sempre l'utilizzo dell'apposita protezione circolare.

The vent pipe allows moisture and vapour under waterproofing membrane to go out. It is available in the following models: the simple wall version used in case of a simple waterproofing membrane and the double wall version used in the presence of insulating panels. For a further protection, the use of the special protection collar is also recommended.


1

H 225 mm - Ø 60 mm
Semplice / Simple


3

H 225/270 mm - Ø 75 mm
Doppio / Double


2

H 225/270 mm - Ø 75 mm
Semplice / Simple


4


H 400 mm - Ø 75 mm
Semplice / Simple


5


H 400 mm - Ø 75 mm
Doppio / Double


6


Protezione circolare
Protection collar

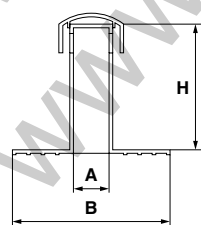

Tipo Semplice
Simple wall roof vent

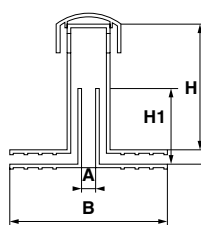

Tipo Doppio
Double wall roof vent

 

Protezione Circolare
Protection collar

ESALATORI / ROOF VENTS

Codice Code	Tipo Type	Ø esterno Ø external	A	B	H	H1	€	Pz	Pz
D011225060	1 Semplice / Simple wall	62	60	300	225	-	6,10	30	270
D011225075	2 Semplice / Simple wall	75	72	300	225	-	7,80	25	225
D030225075	3 Doppio / Double wall	75	60	300	225	190	11,80	25	225
D014270075	2 Semplice / Simple wall	75	72	300	270	-	8,00	25	225
D030270075	3 Doppio / Double wall	75	60	300	270	190	11,95	25	225
D011400075	4 Semplice / Simple wall	75	72	300	400	-	11,00	25	200
D030400075	5 Doppio / Double wall	75	60	300	400	190	14,95	25	200
D150000000	6 Protezione circolare / Protection collar	-	75	180	60	-	1,50	25	1750