

LISTA COMPONENTI / съставни части

SW1: SELETORE ON - OFF
ON - OFF превключвател

F1: INTERRUTORE TERMICO
термо превключвател

LP1: LUCE SPIA VERDE "MOTORE IN MARCIA"
зелена лампа "работещ мотор"

C1: CONDENSATORE
кондензатор

ВНИМАНИЕ:

Контролният панел трябва да бъде свързан от квалифициран персонал - електро - специалист.

Ел. помпа и панелът трябва да бъдат включени към ефективна заземяваща система, в съответствие с ел.реглации.

Линията на напрежението трябва да бъде защитена с диференциален магнитно - термичен ключ, настроен в съответствие с ел.реглации, действащи на местно ниво.


CAUTION:

The control panel must be connected by a qualified electrician.

The electric pump and the panel must be connected to an efficient grounding system in compliance with the electrical regulations locally in force.

The line of supply current must be protected with a differential magnetometric switch measured in accordance with the regulations locally in force.

SCHEMA COLLEGAMENTI Диаграма на свързване

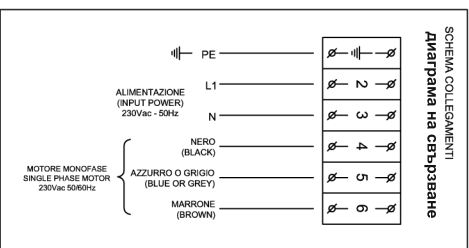

MOTORE MONOFASE
(SINGLE PHASE MOTOR)
230Vac 50/60Hz