
EXPLODED VIEW AND SPARE PARTS LIST

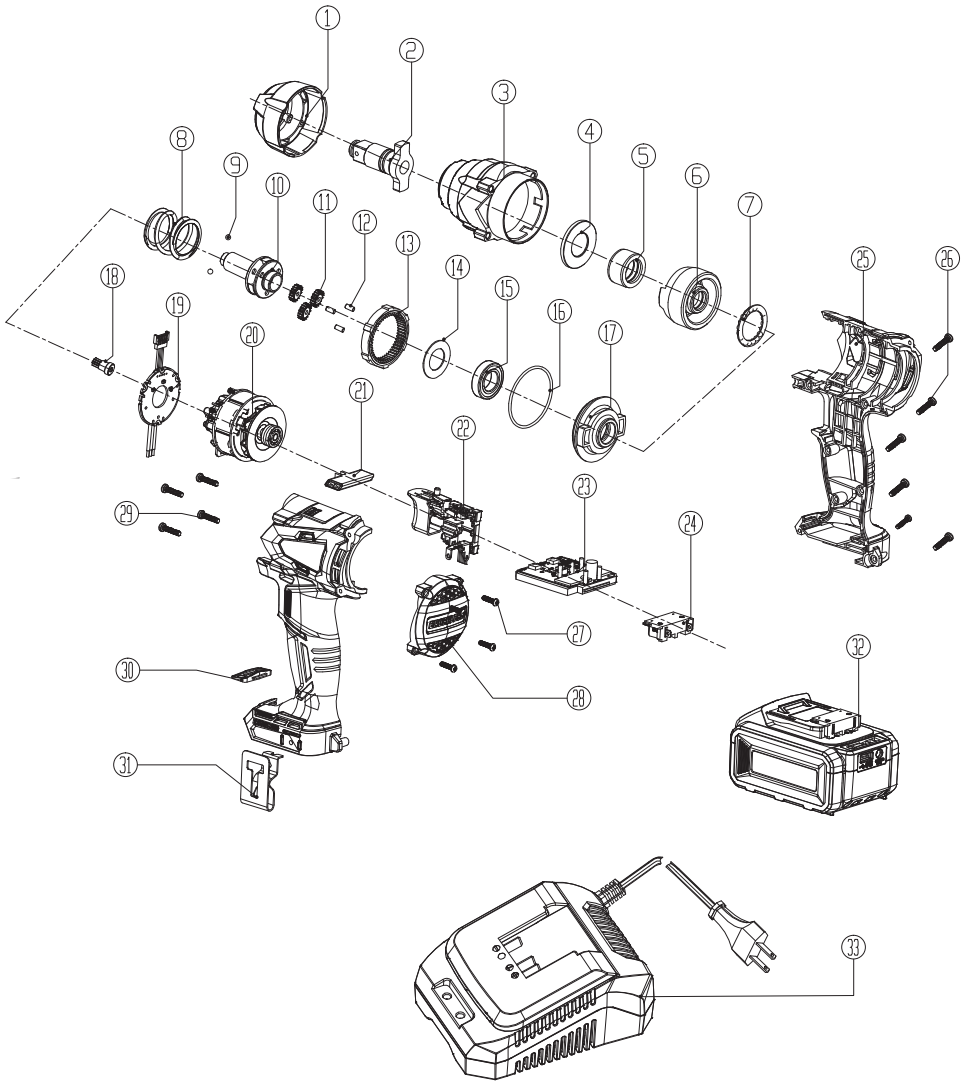

17	Motor cover	1	33	Charge	
16	Sealing ring	1	32	Power pack ass y	
15	Deep groove ball bearings	1	31	belt buckle	1
14	Central shaft washer	1	30	Speed button	1
13	Ring gear	1	29	Screw	4
12	Gear pin	3	28	Case tail cover	1
11	Planetary gear	3	27	Screw	4
10	The central axis	1	26	Screw	7
9	Ball	2	25	Housing	1
8	Impact spring	1	24	Contact plate bracket	1
7	Washer	1	23	Control board	1
6	Impact block	1	22	Switch	1
5	Steel sleeve	1	21	F/R Lever	1
4	Output shaft gasket	1	20	Brushless Motor	1
3	Aluminum casing	1	19	Hall plate	1
2	The central axis	1	18	Motor pinion	1
1	Glue sets	1			