
EXPLODED VIEW

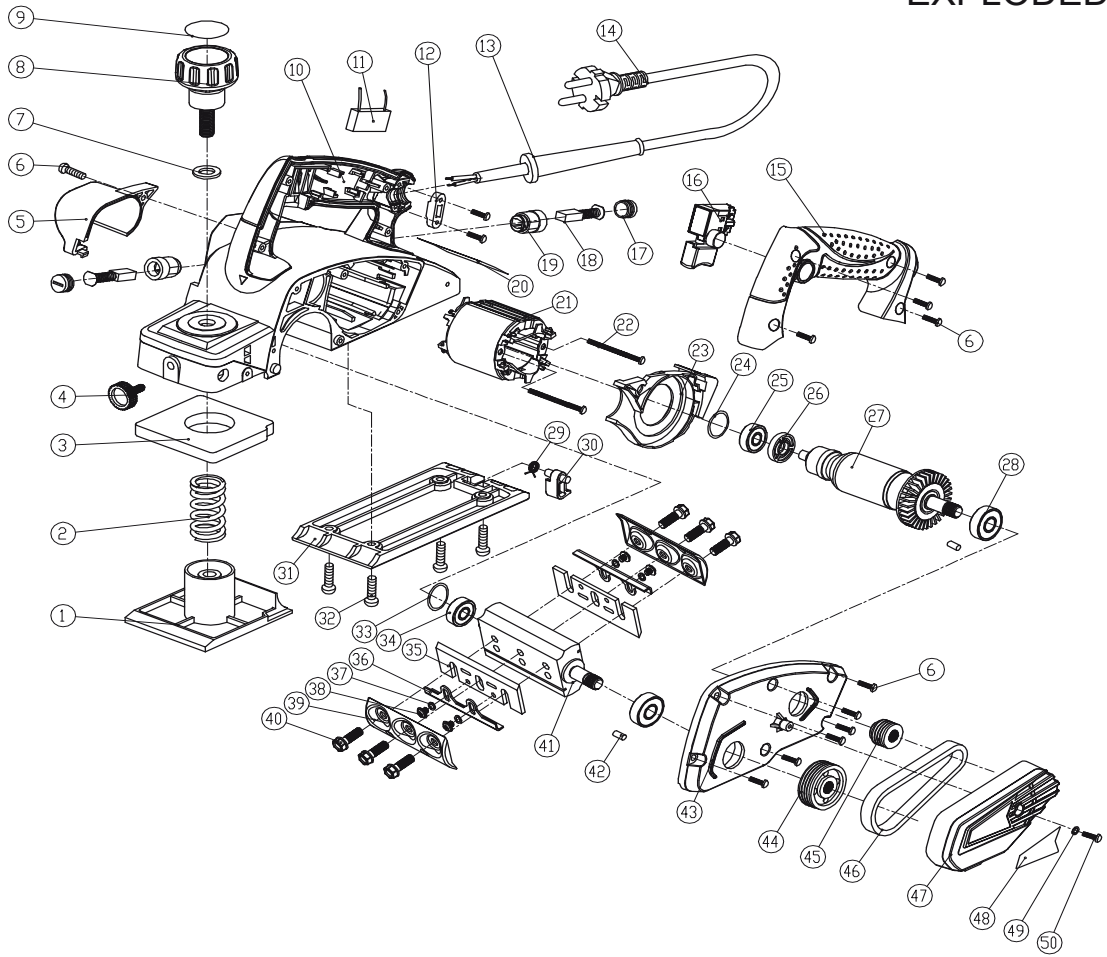

SPARE PARTS LIST

The explosive view figure list

No.	Name	QTY
1	front base	1
2	pressure spring	1
3	cotton pad	1
4	guide rod bolt	1
5	dust cover	1
6	screw ST4.2*16	13
7	flat washer	1
8	adjusting knob	1
9	scale mark	1
10	housing case	1
11	capacity	1
12	cable clamp	1
13	cable sleeve	1
14	cable/plug	1
15	handle cover	1
16	switch	1
17	brush holder cover	2
18	carbon brush	2
19	brush holder	2
20	parameter logo	1
21	stator	1
22	screw ST4.2*60	2
23	wind baffle	1
24	washer Ø19*1.8	1
25	bearing 607	1
26	dust cover ring	1
27	rotor	1
28	bearing6000	2
29	stand bar spring	1
30	stand bar	1
31	back base	1
32	screw ST4.8*14	4
33	O-Rings Ø22*1.8	1
34	bearing 608	1
35	blade	2
36	adjusting blade	2
37	spring washer	4
38	screw	4
39	knife plate	2
40	hexagon screw M6*17	6
41	Knife shaft aluminum	1
42	Shock proof pin	2
43	end cover	1
44	big belt wheel	1
45	small belt wheel	1
46	belt	1
47	belt cover	1
48	logo	1
49	flat washer Ø4	1
50	screw M4*16	1