EXPLODED VIEW AND SPARE PARTS LIST

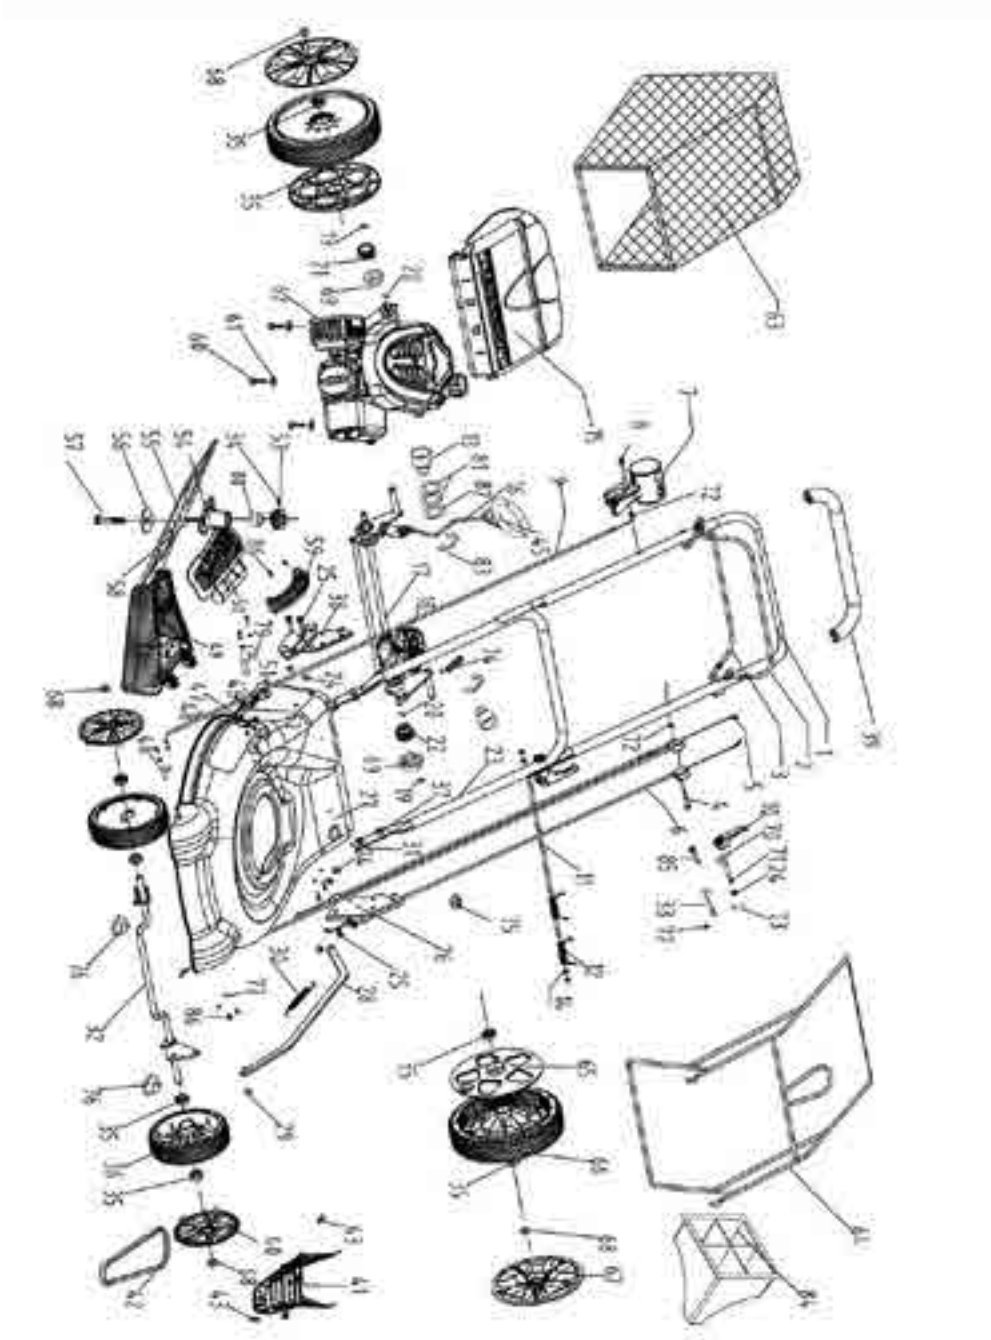

www.raider.bg

RD-GLM12 075007 spare parts list		
No.	description	qty
1	up handrail	1
2	flame rod	1
3	drive rod	1
4	bolts 6×35	1
5	drive cable	1
6	flame cable	1
7	throttle switch	1
8	bolts 6×50	1
9	throttle cable	1
10	[illegible]	2
11	the long axis	1
12	after the [illegible] torsion spring	2
13	bearing units	2
14	retainer 6	4
15	grass cover	1
16	handle	1
17	rear axle	1
18	transmission	1
19	ring opening	2
20	cylindrical pin	1
21	right gear	1
22	left gear	1
23	under handrail	1
24	screw nut M8	6
25	bolts M8×16	3
26	chassis left connecting plate	1
27	chassis	1
28	connecting rod	1
29	nut M6	2
30	link lahuang	1
31	bolts	4
32	front axle	1
33	hanging wire hook	1
34	bolt 6×8	1
35	bearings	8
36	7 inch front wheel	2
37	nut M8	4
38	the right connection plates	1
39	armrest sponge cover	1
40	front wheel cover	2
41	belt protective cover	1
42	leather belt	1
43	screw 6×16	3
44	fixed wire	2
45	handle assembly increase	1
46	torsion spring	1
47	nut m6	2
48	bolts5×12	2
49	Guide grass board	1
50	side cover	1
51	pin	1
52	support	1
53	pulley	1
54	positioning units	1
55	cutting knife	1
56	washer	1
57	bolt 10×40	1
58	flat keys	1

59	stall board	1
60	bolt 8×30	3
61	flat gasket	3
63	collection bags	1
64		
65	rear dust cover	2
66	rear wheel	2
67	rear wheel cover	2
68	nut M10	4
69	bearing	2
72	nut m6	3
73	Cylindrical pin	1
74	spring	1
75	protective ring	1
76	fixed circle	2
77	M6 nut M6	10
78	bolt6×12	4
79	bearing sets of fixed fork	2
80	sleeve	1
81	gasket	2
82	gasket	1
83	retainer φ19	2
84	blocking grass board	1
85	Bolt6×30	1
86	Flat head bolt M6×16	6
88	Tool box	1
89	Metal shield	1
90	plastic front cover	1