
StaboFix® fixing system

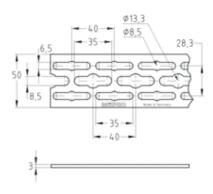

Article Part no. StaboFix® Sections, 50 x 3 mm, length: 2.000 mm, galvanised 129076 StaboFix® Retaining plates, galvanised 129073



Installation in a shaft:Double-sided bolted installation withtwo MÜPRO Pipe Clamps and aMÜPRO Threaded Pin M8 or M10 forthe fixing of parallel MÜPRO Pipes.



Installation in a shaft: With the StaboFix M8 Bolt, MÜPROPipe Clamps are fitted in no time.



Wash basin installation:Installation in tight wall recesses



Wash basin installation: Everything fitted to the exact dimensions.

Alvino.com



Installation in a wall: Washing machine waste pipe.



Wall-mounted installation: Wall-mounted installation with StaboFix $^{\! *}$ together with MÜPROMPC Channel Supports.



StaboFix® Retaining Plate with thelong leg inserted into the Sectionand pressed upwards.



Press the Retaining Plate onto the Section and allow it to click in.



Adjust the fitting to the RetainingPlate and the Section. The mounting can also be done ata 45° or 90° angle.




3NHH OO'COM ${\sf StaboFix}^{\circ} \ {\sf Drilling} \ {\sf Screws} \ {\sf aligned} \\ {\sf with} \ {\sf the} \ {\sf holes} \ \dots$




... and screwed together with theunit.(Note: do not overtighten the DrillingScrews).




Fitting and unit are now firmlyscrewed together.

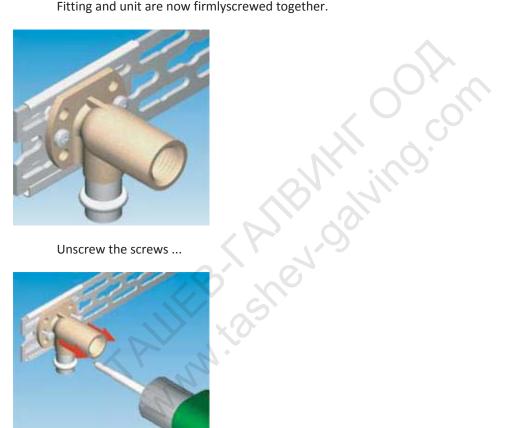

Unscrew the screws ...

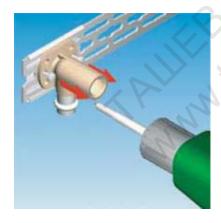

... and remove the wall-fitting.

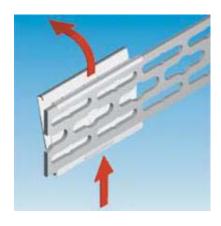

Press down on the Retaining Plateand pull off towards the rear.